 


# INSTRUCTION MANUAL FOR MIYOTA WATCH MOVEMENT

No.	Movement	Model
1	3 Hands analog	01,17,18,19,24,25,32, 33,36,28,42,43,44,45, 46,51,61,62,67,70,81
2	3 Hands analog with date	49,63,66,68,74,82
3	Multifunction (day, date, hour)	60,69
4	Chronograph (hour-, minute & second hand)	72
5	Chronograph (hour-, minute & second hand & date)	71

# 1: MANUAL - 3 Hands analog

## A) DISPLAY

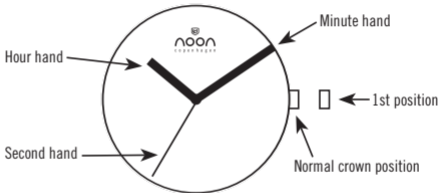 


## B) SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

## 2: MANUAL - 3 Hands analog with date

### A) DISPLAY

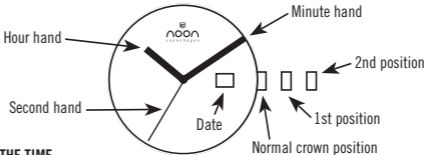

### B) SETTING THE TIME

 
1. Pull the crown out to the 2nd position.
2. Turn the crown to set hour and minute hands.
3. When the crown is pushed back to the normal position, second hand begins to run.

### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
  2. Turn the crown counter-clockwise to set the date.
  3. After the date has been set, push the crown back to the normal position.
- If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.

### 3: MANUAL - Multifunction (day, date, hour)

#### A) DISPLAY

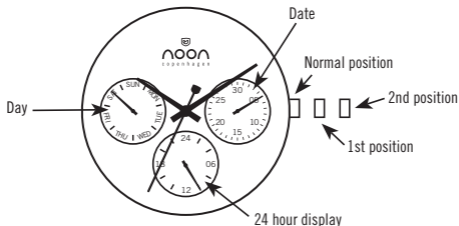

#### B) SETTING THE TIME/DAY

 
1. Pull the crown out to the 2nd position when the second hand points to 12 o'clock.  
Please make sure you have correctly set am/pm before you start to adjust the time.
2. Turn the crown to set hour and minute hands.
3. In order to adjust the day, you must advance the hour hand by 24 hours per day.
4. When the crown is pushed back to the normal position, second hand begins to run.

#### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.  
If the date is set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day.
3. After the date has been set, push the crown back to the normal position.

## 4: MANUAL - Chronograph (hour-, minute & second hand)

### A) DISPLAY

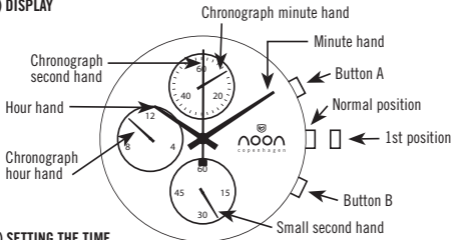

### B) SETTING THE TIME

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set hour and minute hands.
3. When the crown is pushed back to the normal position, small second hand begins to run.

### C) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to maximum of 11 hours 59 minutes 59 seconds.

The chronograph second hand keeps continuously for 11 hours 59 minutes 59 seconds after starting.

Measuring time with the chronograph:

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "B" resets the chronograph and the chronograph second hand, chronograph minute hand, and chronograph hour hand return to zero position.

 
### D) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the 1st position.
2. Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand have been zeroed, return the crown to the normal position.  
Do not push crown to normal position while the chronograph second hand returns to zero position. It stops on the way when crown are returned to normal position and its position is recognized as zero position.

## 5: MANUAL - Chronograph (hour-, minute, second hand & date)

### A) DISPLAY

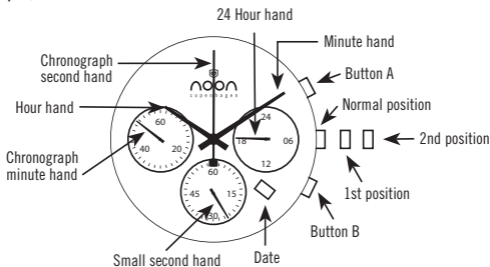

### B) SETTING THE TIME

1. Pull the crown out to the 2nd position.
2. Turn the crown counter-clockwise to set hour and minute hands.
3. When the crown is pushed back to the normal position, small second hand begins to run.

### C) SETTING THE DATE

1. Pull the crown out to the 1st position.
2. Turn the crown counter-clockwise to set the date.  
If the date is between hours of 9:00 PM and 1:00 AM, the date may not change on the following day.
3. After the date has been set, push the crown back to the normal position.

### D) USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/1 second united up to maximum of 59 minutes 59 seconds.

The chronograph second hand keeps continuously for 59 minutes 59 seconds after starting.

Measuring time with the chronograph:

1. The chronograph can be started and stopped each time button "A" is pressed.
2. Pressing button "B" resets the chronograph and the chronograph second hand, chronograph minute hand, and chronograph hour hand return to zero position.

### E) CHRONOGRAPH RESET (INCL. AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to zero position after the chronograph has been reset, and including after the battery has been replaced.

1. Pull the crown out to the 2nd position.
2. Press button "A" to set the chronograph second hand to the zero position. The chronograph hand can be advanced rapidly by continuously pressing button "A".
3. Once the hand have been zeroed, return the crown to the normal position.  
Do not push crown to normal position while the chronograph second hand returns to zero position. It stops on the way when crown are returned to normal position and its position is recognized as zero position.